



LH and RH installation


THRESHOLD KIT PIPE INSTALLATION TEMPLATE

(Through wall pipework)

DO NOT SCALE DRG WHEN PRINTING



STICK TO WALL TO USE

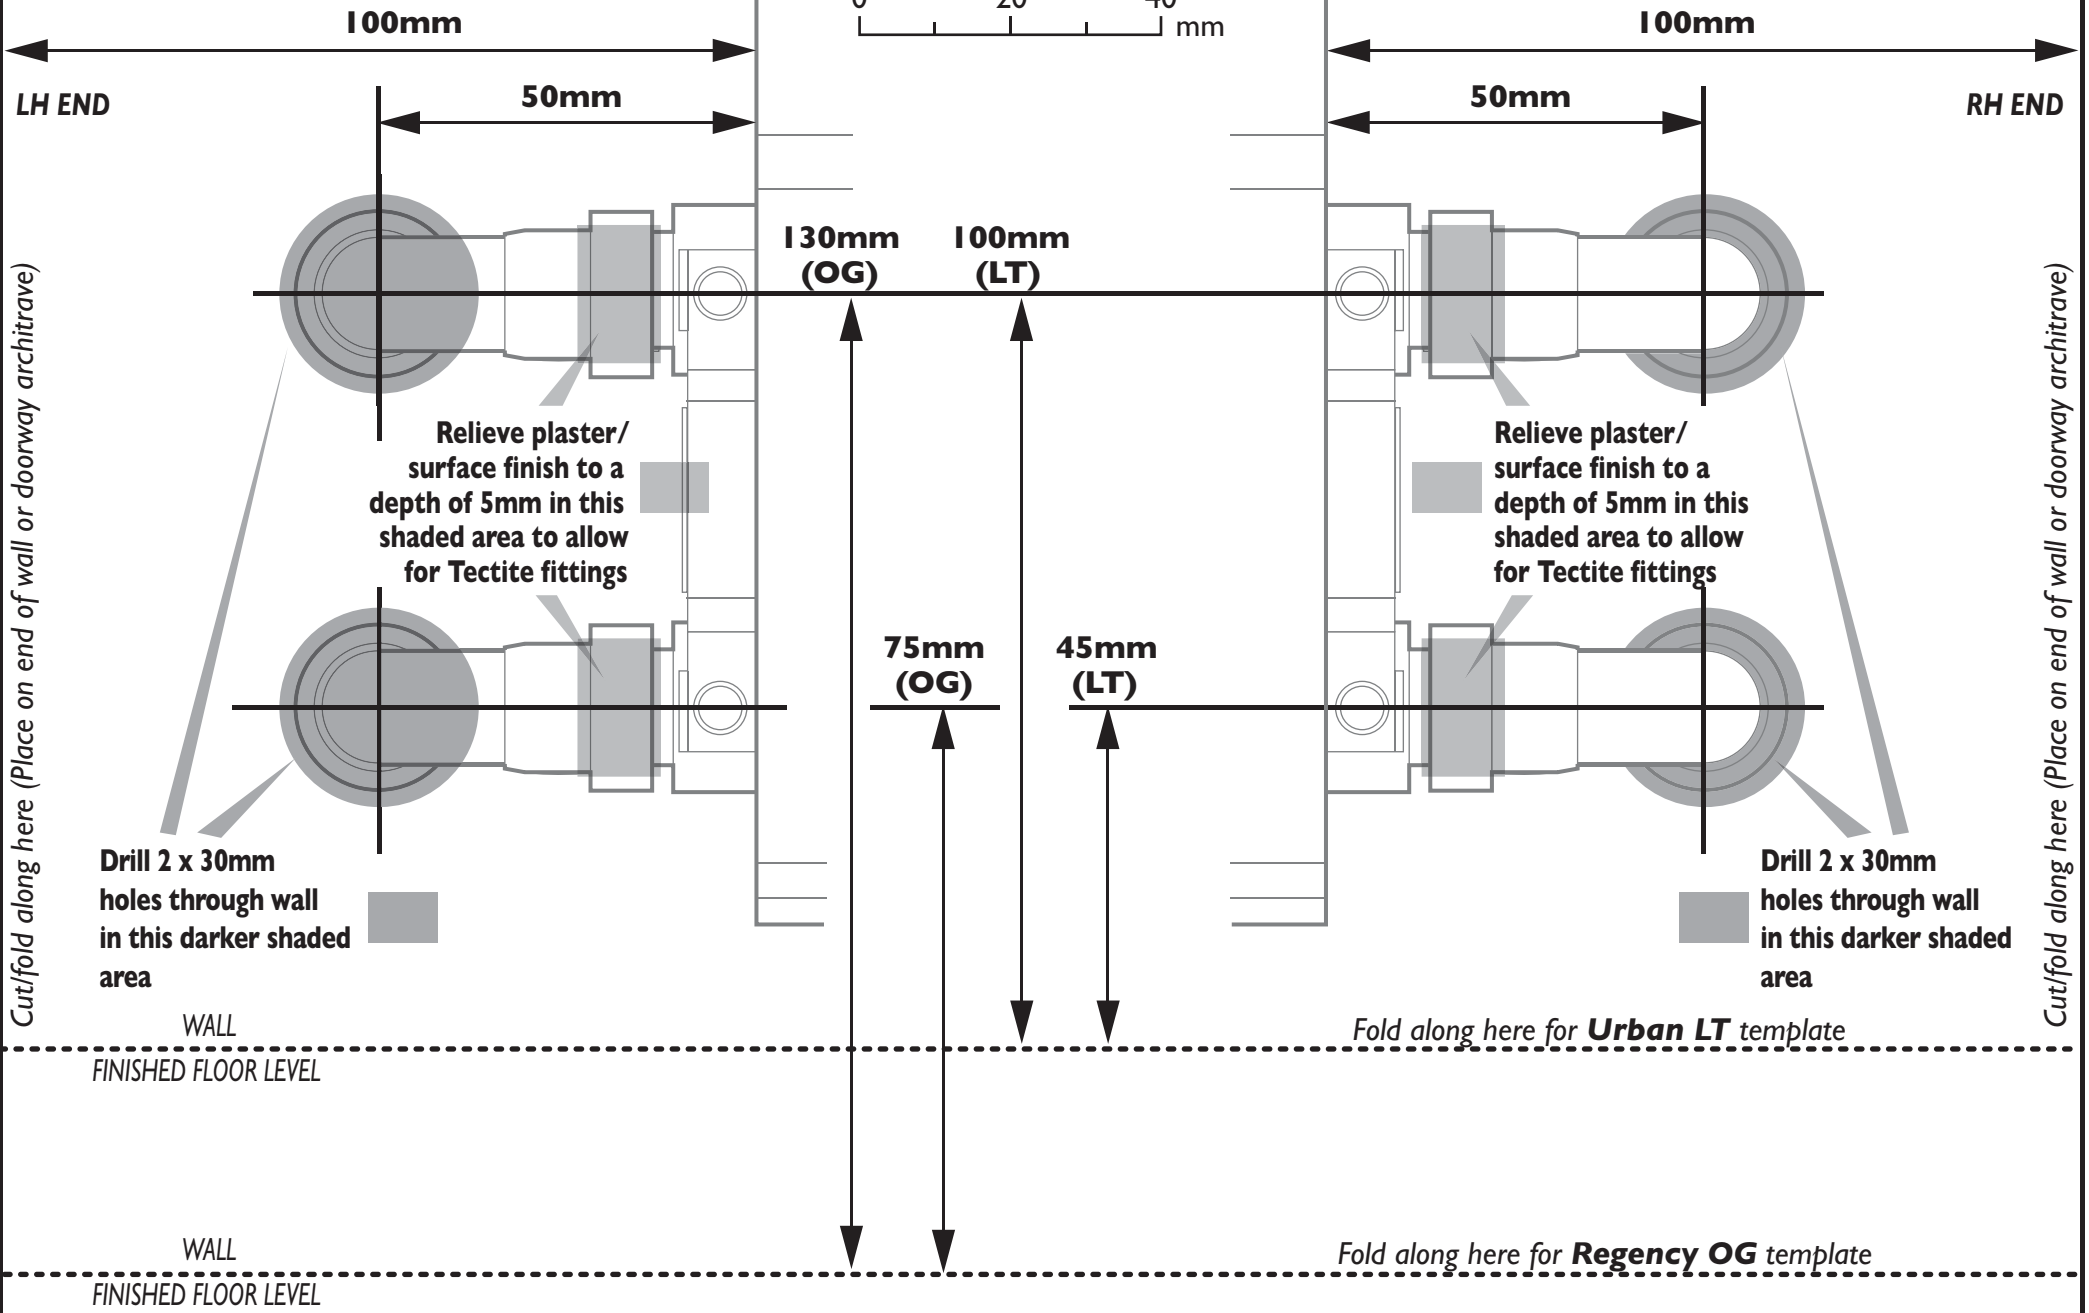

Cut/fold along here (Place on end of wall or doorway architrave)

Cut/fold along here (Place on end of wall or doorway architrave)

LH END

RH END

100mm

100mm

50mm

50mm

130mm
(OG)

100mm
(LT)

75mm
(OG)

45mm
(LT)

Relieve plaster/
surface finish to a
depth of 5mm in this
shaded area to allow
for Tectite fittings

Relieve plaster/
surface finish to a
depth of 5mm in this
shaded area to allow
for Tectite fittings

Drill 2 x 30mm
holes through wall
in this darker shaded
area

Drill 2 x 30mm
holes through wall
in this darker shaded
area

WALL
FINISHED FLOOR LEVEL

WALL
FINISHED FLOOR LEVEL

Fold along here for **Urban LT** template

Fold along here for **Regency OG** template