



# LH END clockwise installation


120mm

100mm

65mm

LH END

Cut/fold along here (Place on end of wall or doorway architrave)

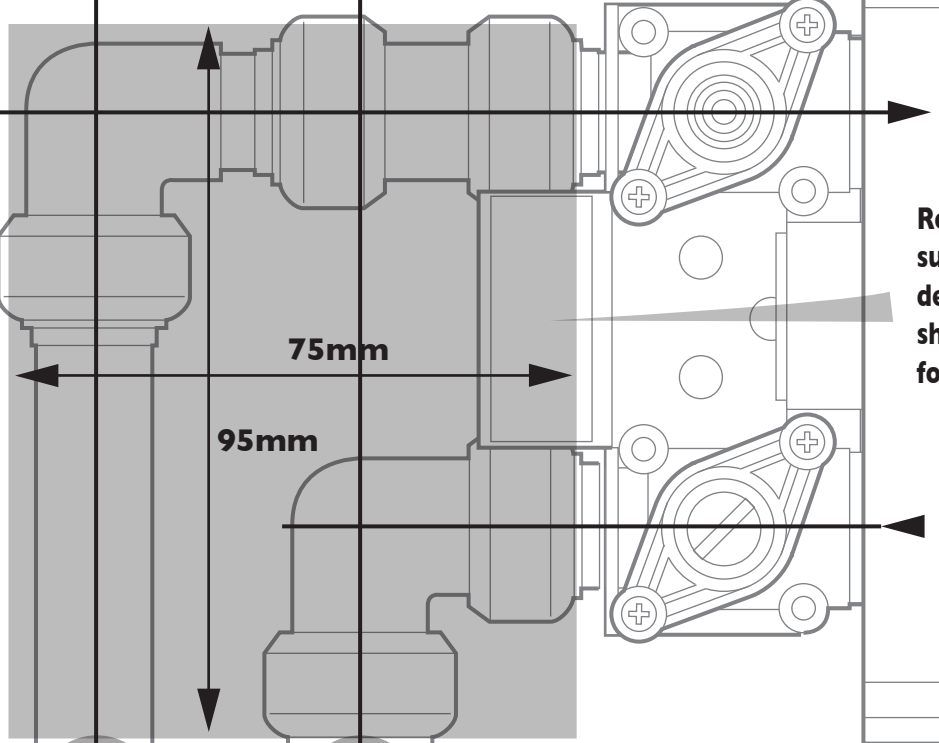

75mm

95mm

Fold along here for Deco PR template

Fold along here for Urban LT template

Fold along here for Regency OG template


35mm

Drill 2 x 18mm holes touching wall surface

# SINGLE TRV INSTALLATION

(Through floor pipework)

DO NOT SCALE DRG WHEN PRINTING



# RH END anti-clockwise installation

DiscreteHeat company limited  
Tel: 0845 1238367 Fax: 01942 892836  
e-mail: info@discreteheat.co.uk  
web: www.discreteheat.co.uk

FEED (TRV VALVE)

Relieve plaster/surface finish to a depth of 5mm in this shaded area to allow for Tectite fittings

RETURN (LOCKSHIELD VALVE)

130mm (OG)

100mm (LT)

90mm (PR)

35mm (PR)

75mm (OG)

45mm (LT)

WALL

FINISHED FLOOR LEVEL

WALL


FINISHED FLOOR LEVEL

WALL

FINISHED FLOOR LEVEL

Drill 2 x 18mm holes touching wall surface

Plan view for drilling feed and return pipe holes in floor



STICK TO WALL TO USE

35mm

Cut/fold along here (Place on end of wall or doorway architrave)